IMPORTANTSAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the **following:**

a) Read all instructions.

b) To protect against risk of electrical shock do not put the **base** in water or other liquid.

c) This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.

d) Avoid contacting moving parts.

e) The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.

f) Do not use outdoors.

g) Do not let cord hang over edge of table or counter.

h) Do not let cord contact hot surface, including the stove.

i) Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

Use only with Listed/Certified ITE Power Supply WARNING: Against using unapproved sources.

j) SAVE THESE INSTRUCTIONS


q) Turn the appliance OFF and disconnect it from the charger when not in use, before assembling or disassembling parts, and before cleaning. To disconnect, grasp the USB plug or charger plug and pull it from the outlet or device. Never pull on the charging cable.

l) Do not operate any appliance with a damaged charging cable or charger after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.

m) Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.

n) Risk of thermal burn injury due to excessive pressure in the container. Do not blend hot liquids.


IN THE BOX

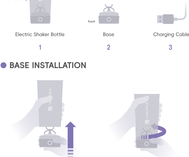

Electric Shaker Bottle | Base | Charging Cable

1 | 2 | 3


BASE INSTALLATION

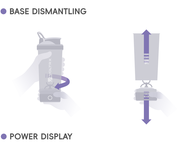

BASE DISMANTLING



POWER DISPLAY

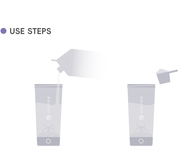

Green light
full battery

Red light
low battery

Red light flashes
3 times no power

BUTTON OPERATIONS



CLICK
30 sec mixing

DOUBLE CLICK
3 min mixing

CLICK DURING MIXING
stop

USE STEPS



Add liquid
(Oz (10ml/1 tbsp))

1

Add protein powder
and other powders

2



Click the Button
one click work for 30
seconds,double click
work for 3 minutes

3

Drink smooth
milkshake

4

CLEANING METHOD


Dishwasher washing



Remove the base

Put the cup and lid upside
down in the dishwasher

CLEANING METHOD

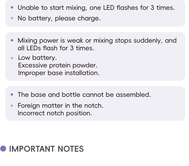


Add warm water
and dish soap

1

Click the button
to start

2

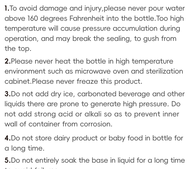

Pour off water
and rinse

3

Clean the lid

4

TROUBLESHOOTING

- Unable to start mixing, one LED flashes for 3 times.
- No battery, please charge.

- Mixing power is weak or mixing stops suddenly, and all LEDs flash for 3 times.
- Low battery.
  Excessive protein powder.
  Improper base installation.

- The base and bottle cannot be assembled.
- Foreign matter in the notch.
  Incorrect notch position.

IMPORTANT NOTES

Usage Safety

1.To avoid damage and injury,please never pour water above 160 degrees Fahrenheit into the bottle.Too high temperature will cause pressure accumulation during operation, and may break the sealing, to gush from the top.

2.Please never heat the bottle in high temperature environment such as microwave oven and sterilization cabinet.Please never freeze this product.

3.Do not add dry ice, carbonated beverage and other liquids there are prone to generate high pressure. Do not add strong acid or alkali so as to prevent inner wall of container from corrosion.

4.Do not store dairy product or baby food in bottle for a long time.

5.Do not entirely soak the base in liquid for a long time to avoid failures.

Battery and Charging

1.Battery life mainly depends on your usage frequency. The statement of charge once for 1 month is calculated based on using 3 times a week under 30 sec mixing mode.Battery performance will gradually decline with the time of use.

2.When charging, LED indicator light will flash at current battery level, and all indicator lights are off after full charging.

3.At the end if mixing,if LED indicator lights turn off one after another, and the last LED light flashes quickly for 3 times ,it means the battery should be charged.

Get support, register your product at gfcc.tw/register

Recycle
Do not throw away with household waste. Please dispose of in accordance with local recycling regulations.